

Audi A4

Current Flow Diagram


No. 96 / 1

Edition 05.2001

Electric windows, 4-door (with roll-back function)


From model year 1997

Fuse box:

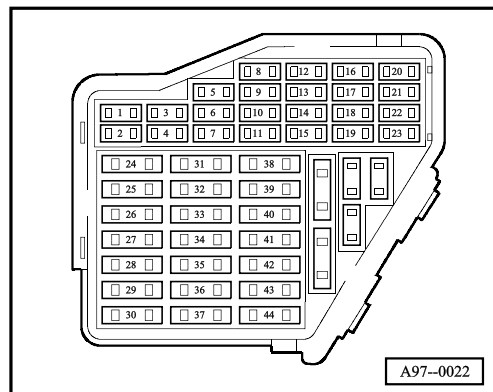

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

8-point relay carrier:

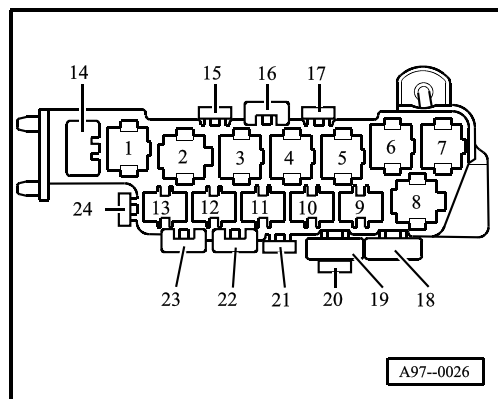

Position of relays:

- 22 - Fuse for rear electric windows
- 23 - Fuse for front electric windows

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

Current Flow Diagram

No. 96 / 2




D	- Ignition/starter switch
J245	- Sliding sunroof adjustment control unit
S37	- Electric window single fuse (front)
S43	- Electric window single fuse (rear)
T6j	- 6-pin connector, red, left connector point, A pillar
T6k	- 6-pin connector, brown, left connector point, A pillar
T10j	- 10-pin connector, green, left connector point, A pillar
T10k	- 10-pin connector, red, at B pillar, left
T10n	- 10-pin connector, red, right connector point, A pillar
T10o	- 10-pin connector, red, at B pillar, right
T10aa	- 10-pin connector, orange, right connector point, A pillar
V94	- Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system
A2	- Positive (+) connection (15), in dash panel wiring harness
B136	- Connection (opening) - convenient open/close function, in electric window wiring harness
B137	- Connection (closing) - convenient open/close function, in electric window wiring harness
*	- Only models with electric sunroof

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Audi A4

Current Flow Diagram


No. 96 / 3

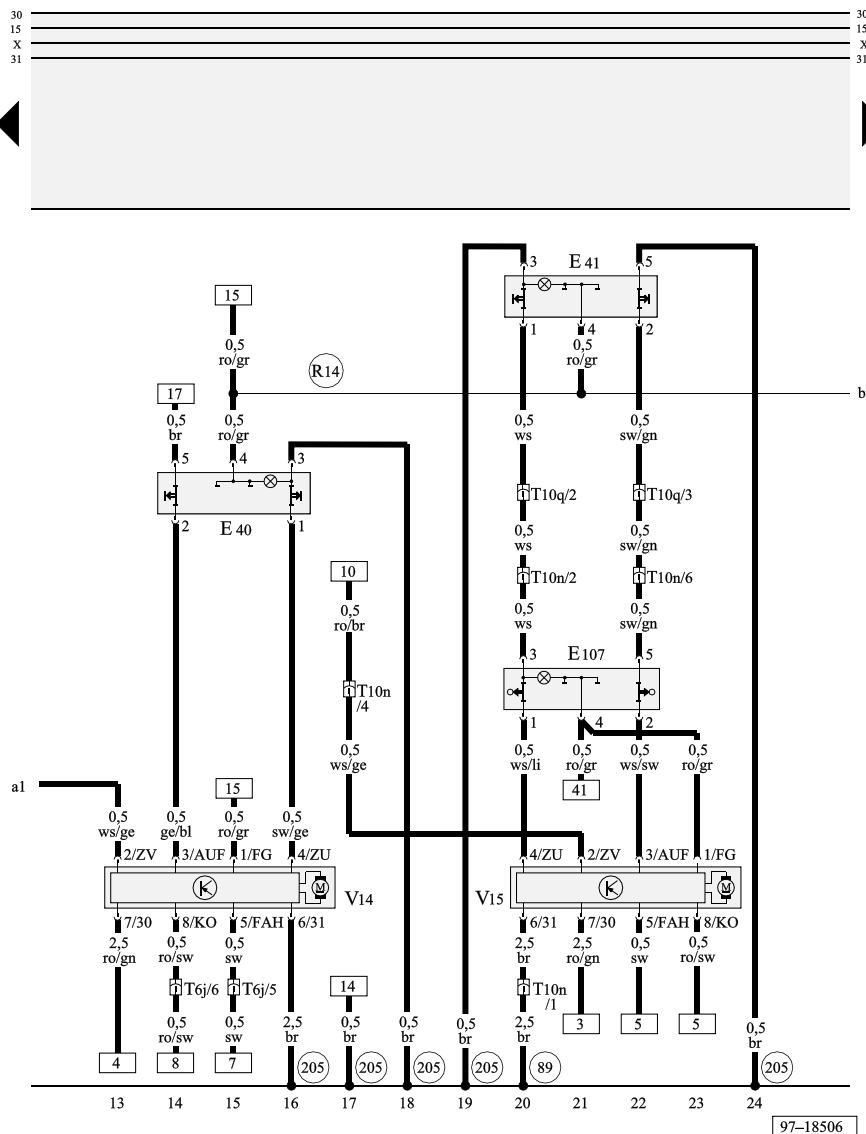**Electric windows, 4-door (with roll-back function)**

- E40 - Electric window switch, front left (in driver's door)
- E41 - Electric window switch, front right (in driver's door)
- E107 - Electric window switch, front right (in front passenger's door)
- T6j - 6-pin connector, red, left connector point, A pillar
- T10n - 10-pin connector, red, right connector point, A pillar
- T10q - 10-pin connector, blue, left connector point, A pillar
- V14 - Electric window motor, left
- V15 - Electric window motor, right
- 89 - Earth connection -1-, in electric window wiring harness
- 205 - Earth connection, in door wiring harness - driver's side
- R14 - Connection -1- (open), in door wiring harness, driver's side

Current Flow Diagram

No. 96 / 4

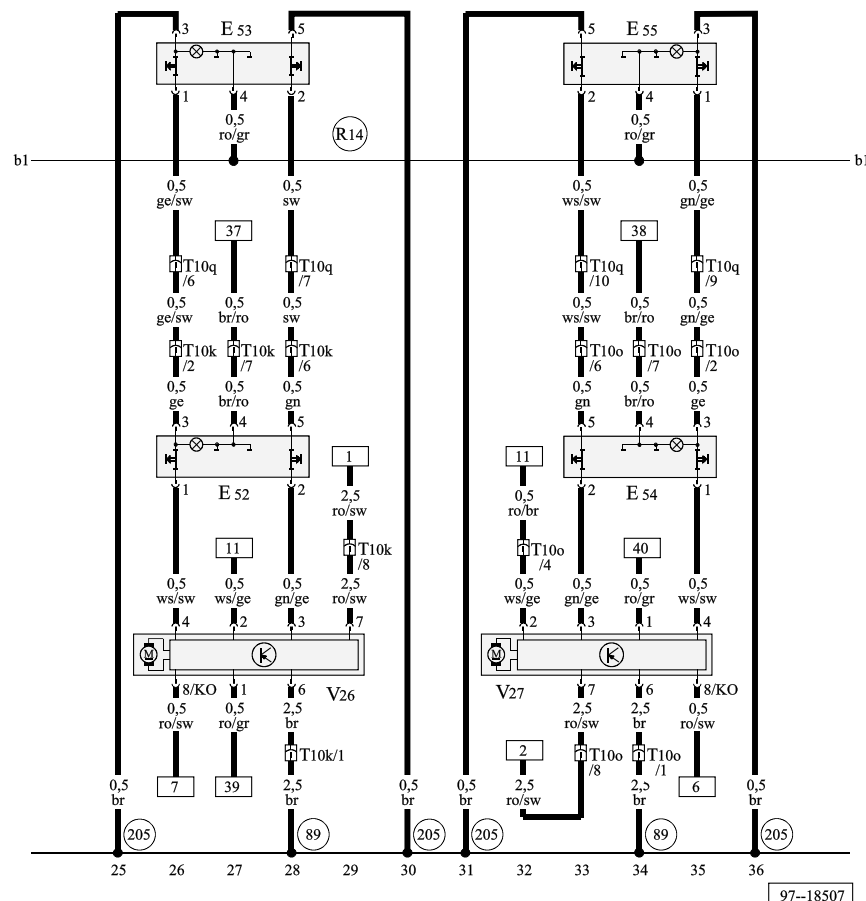



- E52 - Electric window switch, rear left (in door)
- E53 - Window lifter switch, rear left (in door)
- E54 - Electric window switch, rear right (in door)
- E55 - Window lifter switch, rear right (in door)
- T10k - 10-pin connector, red, at B pillar, left
- T10o - 10-pin connector, red, at B pillar, right
- T10q - 10-pin connector, blue, left connector point, A pillar
- V26 - Electric window motor, rear left
- V27 - Electric window motor, rear right
- 89 - Earth connection -1-, in electric window wiring harness
- 205 - Earth connection, in door wiring harness - driver's side
- R14 - Connection -1- (open), in door wiring harness, driver's side

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Audi A4

Current Flow Diagram

No. 96 / 5

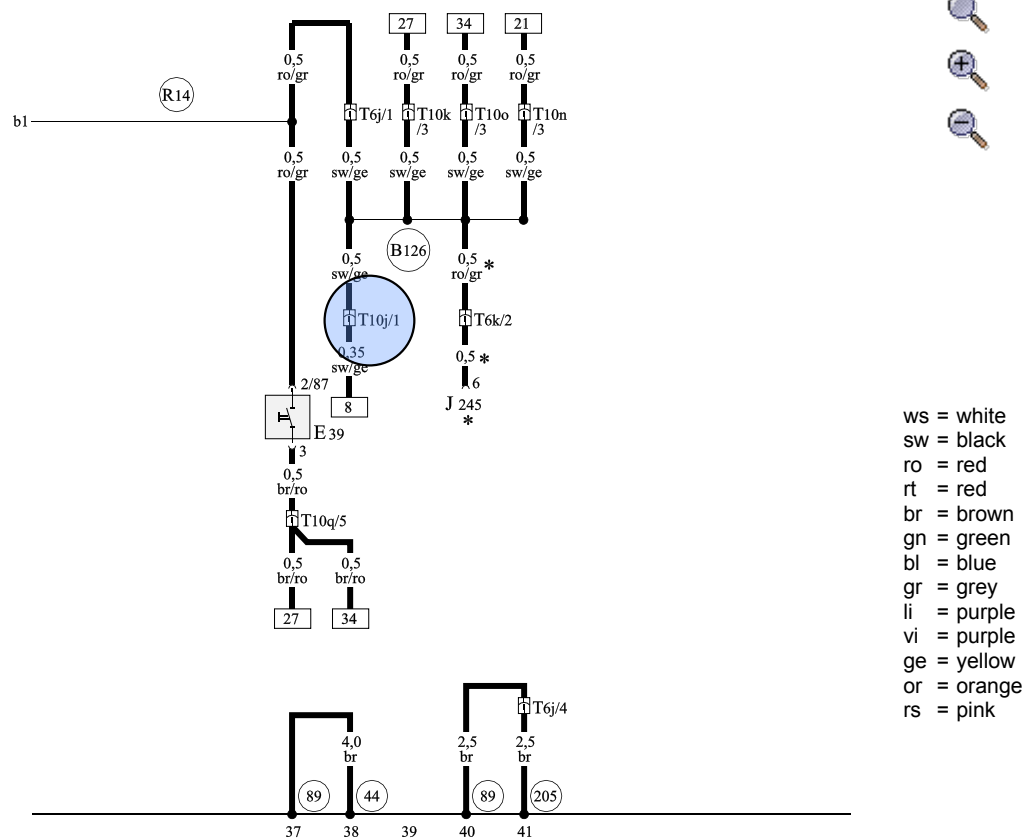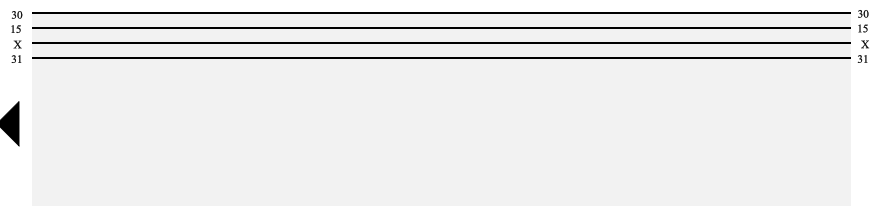**Electric windows, 4-door (with roll-back function)**

- E39 - Rear electric window isolation switch
- J245 - Sliding sunroof adjustment control unit
- T6j - 6-pin connector, red, left connector point, A pillar
- T6k - 6-pin connector, brown, left connector point, A pillar
- T10j** - 10-pin connector, green, left connector point, A pillar
- T10k - 10-pin connector, red, at B pillar, left
- T10n - 10-pin connector, red, right connector point, A pillar
- T10o - 10-pin connector, red, at B pillar, right
- T10q - 10-pin connector, blue, left connector point, A pillar
- 44 - Earth point, lower part of left A-pillar
- 89 - Earth connection -1-, in electric window wiring harness
- 205 - Earth connection, in door wiring harness - driver's side
- B126 - Connection (87, electric windows control unit), in electric window wiring harness
- R14 - Connection -1- (open), in door wiring harness, driver's side
- * - Only models with electric sunroof

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

97-18508